

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


BMW 5 Series F10/F11/F07
BMW 6 Series F12/F13

PART NO. 8871

Contents 內含配件

※ 安裝過程請使用手動工具

1. 19mm後防傾桿 1PCS
2. 防傾桿固定橡皮 2PCS
3. 防傾桿固定座 2PCS
4. M10X1.25X25螺絲 4PCS

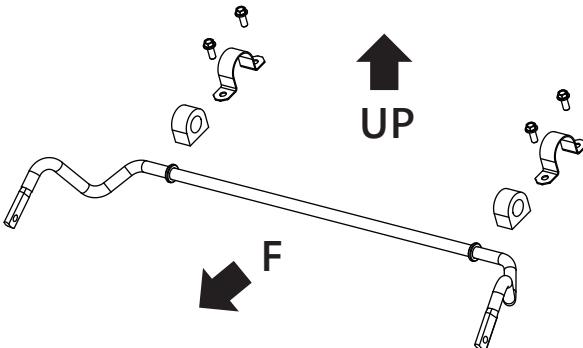

Installation tips 安裝提示

※ 防傾桿專用橡皮，已有加入自潤功能，無須添加潤滑劑



一般車型可直接更換後防傾桿即可
需使用配件：防傾桿專用橡皮、防傾桿固定座

※ 注意：如施工車輛本身有原廠防傾桿，組裝後防傾桿時使用原廠螺絲即可

如施工車型，原廠無配裝後防傾桿，需使用M10X1.25X25螺絲，並且在預留孔部位
· 加工攻牙(M10X1.25)

如有安裝車型原廠無後防傾桿，建議選購搭配本公司生產專用李仔串 8973



螺絲扭力參考值：

M8-60Nm
M10-80Nm
M12-100Nm
M14-160Nm

建議使用螺絲防鬆膠

Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全。

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊。



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

