

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


FORD EUROPE MONDEO MK4 07-14
VOLVO S60 2nd 2010-
VOLVO V60 2010-on
VOLVO XC60 2008-on
VOLVO V70 / XC70 3rd 2007-on
VOLVO S80 2007-on

PART NO. 8550

Contents 內含配件


※ 安裝過程請使用手動工具

1. 25.4mm 前防傾桿 1PCS
2. 防傾桿固定橡皮 2PCS
3. 防傾桿固定座 2PCS

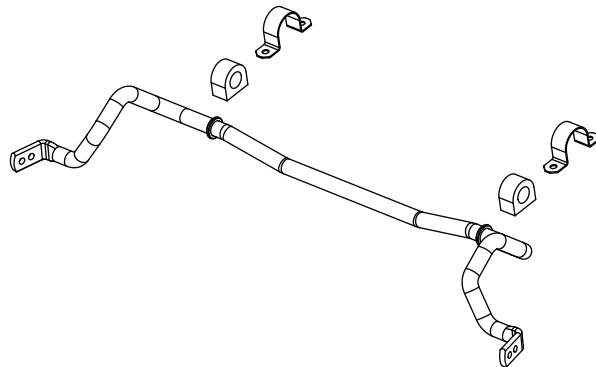

Installation tips 安裝提示

※ HARDRACE 防傾桿專用橡皮已加入自潤功能，無須添加潤滑劑

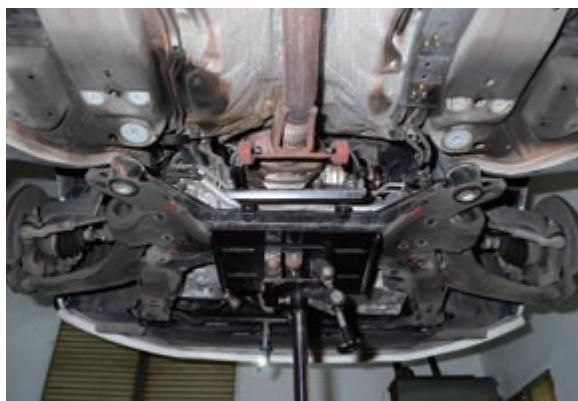


建議以拆卸口字樑後端，斜放取出更換防傾桿，須拆方向機固定螺絲
・後下方引擎腳及方向機液壓油管固定支架



螺絲鎖緊扭力：
M8-60Nm
M10-80Nm
M12-100Nm
M14-160Nm

建議使用螺絲防鬆膠

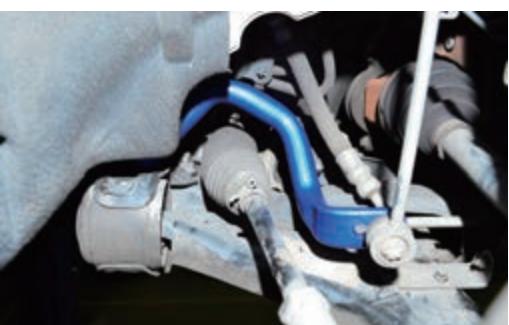

Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全。

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊。



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

