


## Application 適用車型

Toyota C-HR '17-present

## Components 內含配件

① Brace 結構桿桿身

1PCS

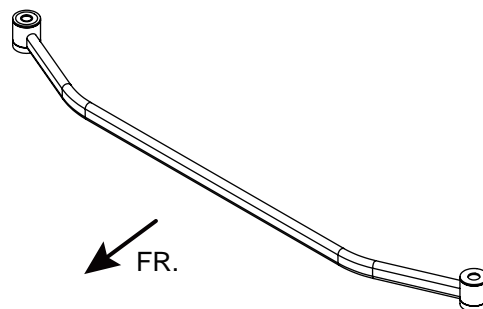

## Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全。否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置。或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲。或依照說明中標註的扭力上鎖。

## Instructions 安裝說明

1. Remove the two rear mounting bolts of the rear sub-frame on both sides.  
(See figure 1)  
拆卸後副車架後端的兩個螺絲。(請參考圖表一)



2. Install ①Brace to the vehicle using the removed bolts.  
(See figure 2&3)

將 ①結構桿桿身 組裝於車輛，並鎖上已拆下的原廠螺絲固定桿身。  
(請參考圖表二、三)



Illustration of installed state  
安裝完成示意圖

