

Installation Instructions

安裝說明書

4-POINT FRONT LOWER BRACE

前下井字拉桿


#Q0091

Application 適用車型

Toyota Corolla/ Altis '13-present

Components 內含配件

① Brace 拉桿桿身	1PCS
② Bracket-RH 支架-右	1PCS
③ Bracket-LH 支架-左	1PCS
④ Bolt 螺絲 (XN-M10x1.25x20)	4PCS

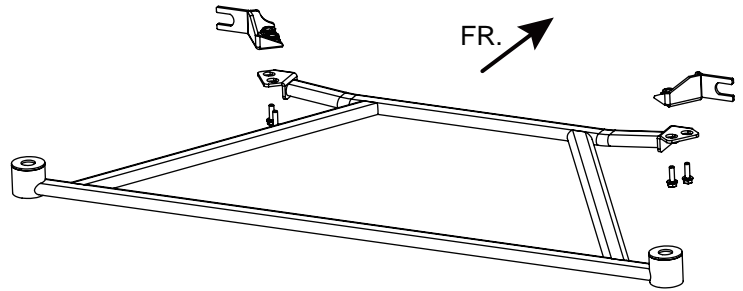

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Loosen the bolts securing front bushings of the lower control arms. Install ②&③ Brackets with the openings inserted to the loosened bolts, then tighten the bolts. (See figure 1)

鬆開前下控制臂前鐵套的固定螺絲，接著安裝 ②及③ 支架，將支架的開口置入鬆開的螺絲後將螺絲鎖上。(請參考圖一)



2. Remove the rear two bolts from the sub-frame to position ① Brace to the vehicle. (See figure 2&3)

卸下副車架後端的兩個螺絲，再將 ① 拉桿桿身 組裝至車輛。(請參考圖二、三)



3. Reinstall the removed bolts to the rear part, and install supplied ④ Bolts to the brackets to secure the brace. (See figure 2&3)

沿用原副車架螺絲將拉桿後端鎖上，並使用配件 ④ 螺絲 將拉桿前端固定於支架。(請參考圖二、三)

Illustration of installed state

安裝完成示意圖

