

Installation Instructions

安裝說明書

MIDDLE LOWER BRACE

中下結構桿


#Q0381

Application 適用車型

M-BENZ C-CLASS W205

Components 內含配件

① Brace 結構桿桿身.....1pcs

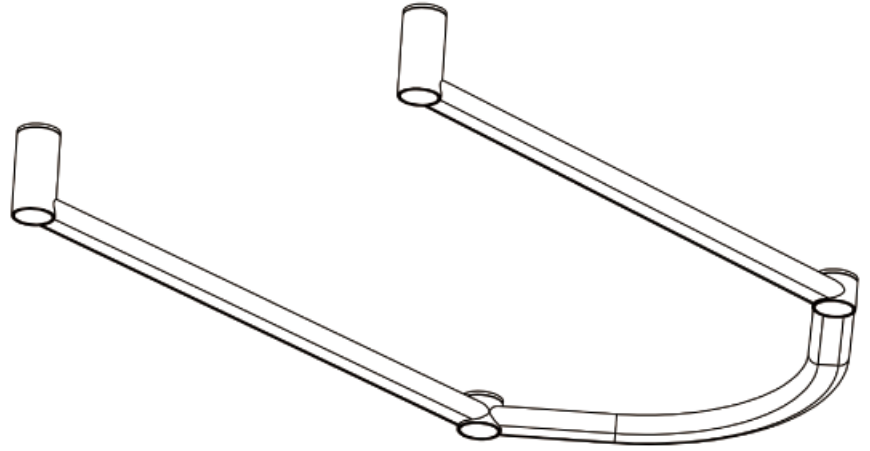


Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Raise and safely support the vehicle.
將車輛升起。
2. Remove the factory drive shaft tunnel reinforcement brace bolts (Torx screw).
將原廠傳動軸通道強化結構桿的星型螺絲拆下。

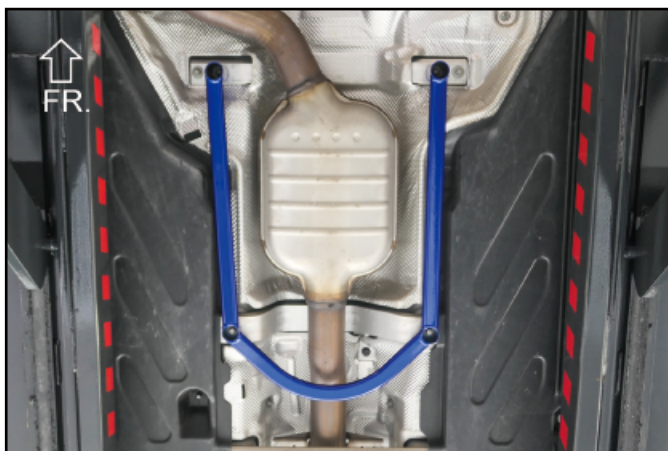

3. Install the brace to the vehicle using original bolts.
使用原廠螺絲，將結構桿桿身安裝至車輛。

▲ Illustration of installed state 安裝完成示意圖